



Brother MFC-490CW Front Panel Replacement

This guide will show you how to remove and replace the front panel of the printer.

Written By: Matt



INTRODUCTION

Many functions, including the LCD screen dial pad and device functions can wear and no longer work and may need to be replaced.



TOOLS:



- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Remove screws holding the front panel



- After unscrewing these 12.1mm screws, holding the control panel in place.

Step 2 — Unplug the panel from the rest of the printer

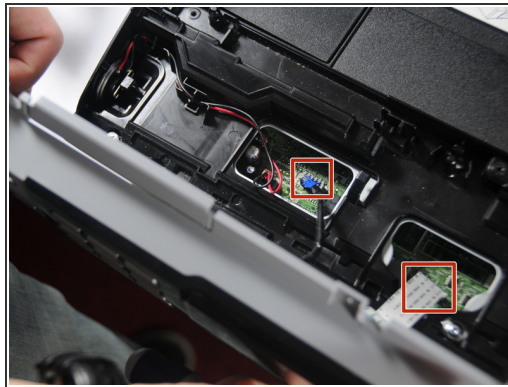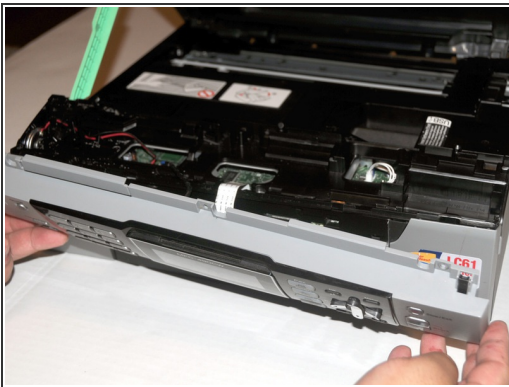

- Lift up the front panel from the device.
- Gently lift up and pull out the data cables that attach the panel to the printer.

To reassemble the front panel, follow these instructions in reverse order.

This document was last generated on 2017-07-08 10:10:48 PM.